

Care & Cleaning Instructions

AQUATROL[®] 4500, PAM[®]-II-ST, ADVANTAGE[®] 6700

The escutcheon pointer & wall flange should never be cleaned with abrasive cleaners or polish. Wipe surfaces with a damp cloth and dry with a soft towel.

Cleaning Instructions:

1. Remove escutcheon pointer and wall flange.
2. Turn off hot and cold water supplies.
3. Temporarily place escutcheon pointer on spline and turn LEFT to maximum "HOT" position. Unscrew cover and remove complete interior assembly.
4. Remove control rod from assembly, submerge in non-corrosive cleaning solution and flush with clean water. Do not attempt to adjust or remove the stop screw, this will change the high temperature limit setting.

NOTE: Before reinserting assembly in valve (with cover gasket) make sure escutcheon pointer has been turned LEFT to the maximum RED ("HOT") position.

