

## **AQUATROL® COMBINATIONS**





## 4500 AQUATROL® Pressure Actuated Mixer


- Durable stainless steel balancing piston to equalize hot and cold supply pressures.
- Built-in shutoff for single handle operation
- Removable one piece upper and lower valve seat
- Internal parts of bronze and stainless steel
- Cast wall flange and lever handle, polished chrome plated
- Maximum operating pressure: 125 PSIG (860KPA)
- Adjustable high temperature limit stop set for 110°F\* (43°C)
- Color coded dial, Off through Hot, with directional indicators
- Angle checkstops, copper tube connection
- Plasterguard/thin wall mounting bracket included.
- H-05 ABS shower head, brass ball joint adjustable spray, arm and flange, 2.5 GPM, (9.51/min)
- D2L Inline diverter valve with lever handle <sup>1</sup>/<sub>2</sub>" copper tube connections.
- 501P(G) 24" glide rail, 2.5 GPM (9.5 l/min) max flow rate
- Double check valve assembly


## Valve is ASSE · 1016 Certified Valve is CSA· B.125-05 Certified



- \_\_\_\_SUFFIX H-03 large brass ball joint shower head in place of H-05
- \_\_\_\_SUFFIX H-15 adjustable spray ball joint massage shower head 1.5GPM (5.7 l/min.) high-impact ABS body chrome plated
- \_\_\_\_SUFFIX H-06 Institutional shower head in place of H-05
- \_\_\_\_SUFFIX H-06-1.5 Institutional shower head 1.5GPM (5.7 l/min.) in place of H-05
- \_\_\_\_SUFFIX AP Anchor plate with screws for H-06
- SUFFIX 501P(G)-30 30" glide rail in place of 24" glide rail on 501P(G)
- \_\_\_\_SUFFIX 515P(G) 1.5GPM (5.7 l/min.) 24"glide rail in place of 501P(G)
- \_\_\_\_SUFFIX 515P(G)-30 1.5GPM (5.7 l/min.) 30"glide rail in place of 501P(G)
- \_\_\_\_SUFFIX RV Reinforced vinyl hose on hand shower
- \_\_\_\_SUFFIX QD Quick disconnect on hand shower
- Note: Leonard Valve Company reserves the right of product, or design modifications without notice or obligation.

Engineer's Approval	Job #
	Arch/Eng
	Contractor



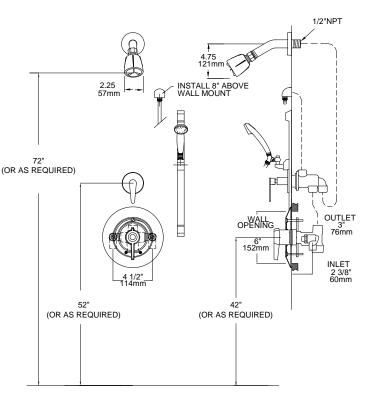



**WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer. For more information, go to <u>www.P65Warnings.Ca.gov</u>



1360 Elmwood Avenue, Cranston, RI 02910 USA Phone: 401.461.1200 Fax: 401.941.5310 Email: info@leonardvalve.com Web Site: http://www.leonardvalve.com