


INSTALLATION ADJUSTMENT SERVICE

PROTON PLUS VALVE

IMPORTANT! Provide serial number when ordering parts!!

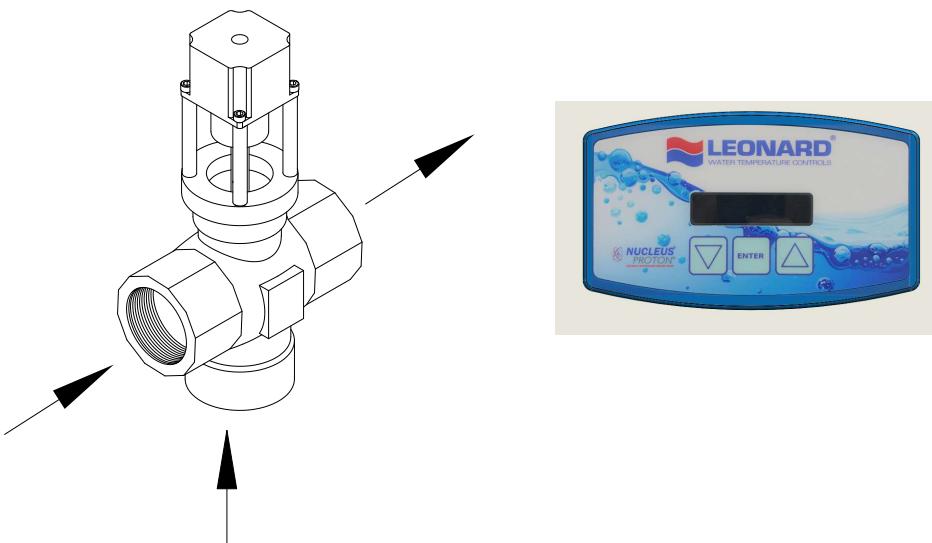

WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer. For more information, go to www.P65Warnings.Ca.gov



INSTALLATION AND FIELD ADJUSTMENT OF THE DEVICE ARE THE RESPONSIBILITY OF THE INSTALLER AND SHALL BE CARRIED OUT IN ACCORDANCE WITH THE MANUFACTURER'S INSTRUCTIONS



<ol style="list-style-type: none"> Leonard Proton Plus Valves are factory pre-assembled and tested and include digital mixing valve and controls which function as a system to meet both high and low demand for tempered water. System should be installed at a location where it can easily be cleaned, adjusted or repaired. System supplies must be connected as shown on page 2. Flush pipes thoroughly after system has been connected. 	<ol style="list-style-type: none"> This assembly MUST be piped according to LEONARD'S REQUIRED PIPING METHOD W, see page 2. Refer to pages starting on page 2 of this bulletin for correct Setup Instructions. Suitable for indoor use only Not for use in process applications, install as an ASSE 1017 master mixer in a domestic hot water system that includes other mixing devices approved to ASSE 1016, 1069, 1070, and 1071.
---	---

Model PPV-075-LF – 3/4" Inlets and Outlet

Model PPV-100-LF – 1" Inlets and Outlet

Model PPV-125-LF – 1-1/4" Inlets and Outlet

Model PPV-150-LF – 1-1/2" Inlets and Outlet

Model PPV-200-LF – 2" Inlets and Outlet

Inlet Check valves are required to prevent cross flow on all models

Maximum Operating Pressure 200PSI (13.8 BAR), valve only


Hot Water Temperature Range: 120° - 180°F (49° - 82°C)

Cold Water Temperature Range: 35° - 80°F (2° - 27°C)

Temperature Adjustment Range: 95° - 160°F (35° - 71°C)

REQUIRED PIPING

Please note the inlet hold, inlet cold and outlet locations as they are required to be piped in this configuration or the valve will not work properly

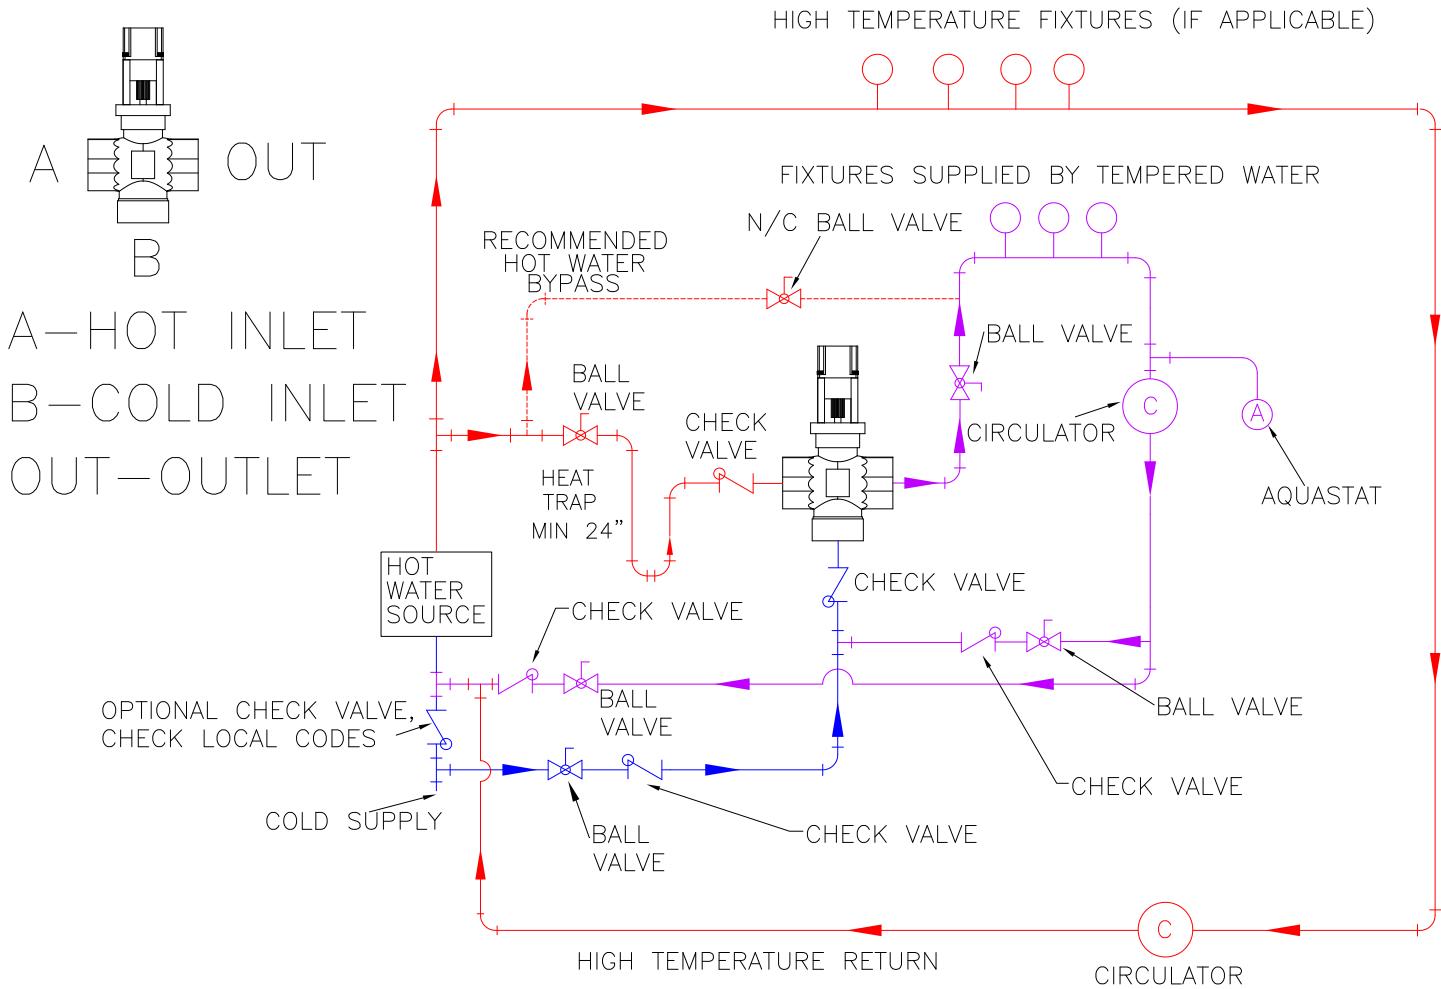

Inlet Check Valves are required to prevent cross flow on all models

Inlet and outlet unions are recommended




1360 Elmwood Avenue, Cranston, RI 02910 USA

Phone: 401.461.1200 Fax: 401.941.5310

Email: info@leonardvalve.com

Web Site: <http://www.leonardvalve.com>

PROTON PLUS – SETUP INSTRUCTIONS

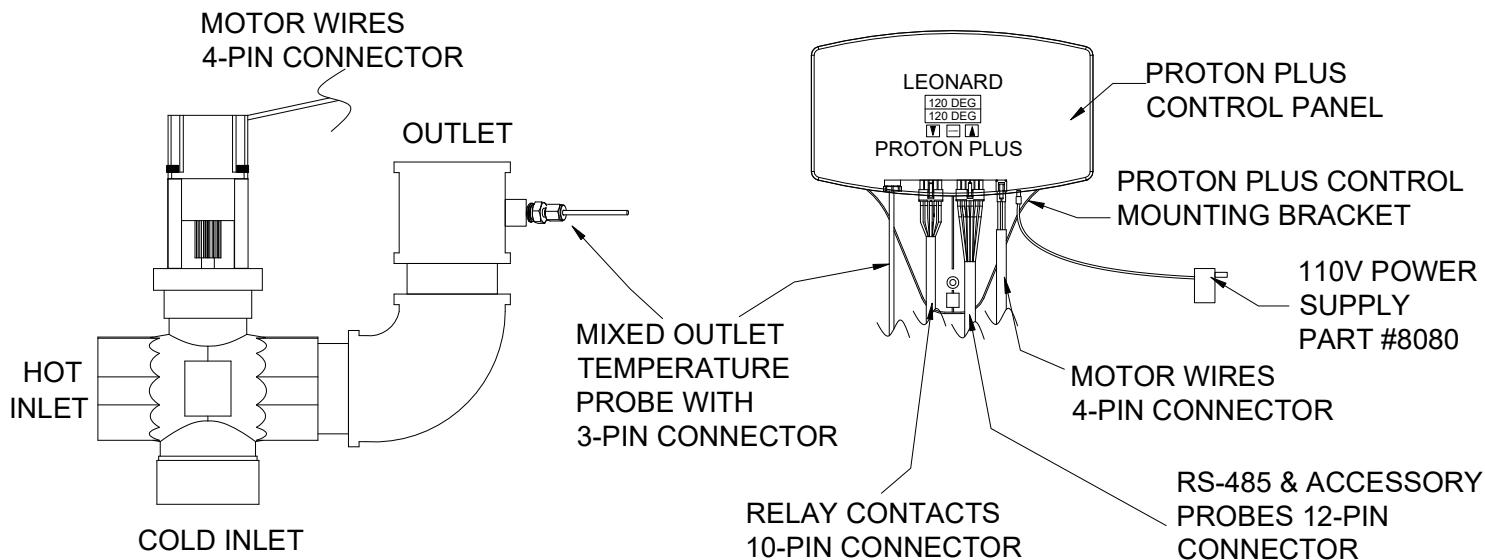

The Proton Plus Control Box has a 2 Line, 16 character LED digital display screen, which serves as the User Interface by utilizing a simple 3-button keypad interface: **▼**, **ENTER** and **▲**, to change temperature see page 11.

On Initial Power up, the valve will go through a full sweep function, which moves the motor its full travel, end-to-end of hot and cold ports of the valve body. This process assigns a numerical value to the distance travelled by the motor, in steps, that will be used in future comparisons to indicate if there is a potential maintenance problem or internal mechanical issue with the components of the valve.



WARNING



The Leonard Proton Plus Digital Mixing Valve is an electronically controlled device utilizing DC circuitry. The connection of the Electronic Control Box to the Mechanical Valve Components is very simple. There is a 3-wire RTD Temperature Probe as well as a 4-wire Motor Harness that must be connected and plugged into the box on the far left and right (respectively) connection points on the bottom of the Control Box. There also provisions for Normal Opened relay contacts (10-Pin) and RS-485 with an additional 3 channels for inlet hot, inlet cold and return temperatures (12-Pin). The 110V Power to the box is accomplished through the barrel connector on the bottom right side of the Control Box. Installer must follow detailed instructions below to ensure proper operation of valve.

Valve assembly is suitable for indoor use only

Proton Plus box purpose of control: Electronic Thermostatic Mixing valve, Type 1 Action, Pollution degree 2, Impulse Voltage: 330V




NOTE! READ ALL INSTRUCTIONS PRIOR TO INSTALLATION




PROTON PLUS – INSTALLATION INSTRUCTIONS

1. The Proton Plus Unit MUST be piped according to Leonard Required Piping Method W (see page 2).
2. Plumb inlets and outlet connections. DO NOT introduce water to the valve until completion of these instructions.
3. Mount Proton Plus Control Box wall bracket to desired location, within 6' of Valve Body using suitable screws. Once mounting bracket is installed control box can be snapped into place.
4. Slide RTD Probe through the compression fitting and insert into the tee on the valve outlet. Tighten compression fitting by hand, and then tighten just 1/8 to 1/4 turn. DO NOT overtighten fitting. See page 24 for more detail.
5. Connect and plug in all connectors that have come with the Proton Plus controller. See below for details.
6. Connect Barrel Connector to bottom right side of Control Box. This is 110Volt Power Supply.
7. Open all inlet and outlet ball valves to pressurize Proton Plus valve.
8. Plug power supply into 110V receptacle. GFCI receptacles are recommended. Installer to follow local electrical codes.
9. Powering Valve Control Box will cause the valve motor to initiate a FULL VALVE SWEEP (End to End), indicating that the motor has traveled ***** Steps. Please Record this initial Full Valve Sweep Value _____ Following the FULL SWEEP, the valve is ready for use

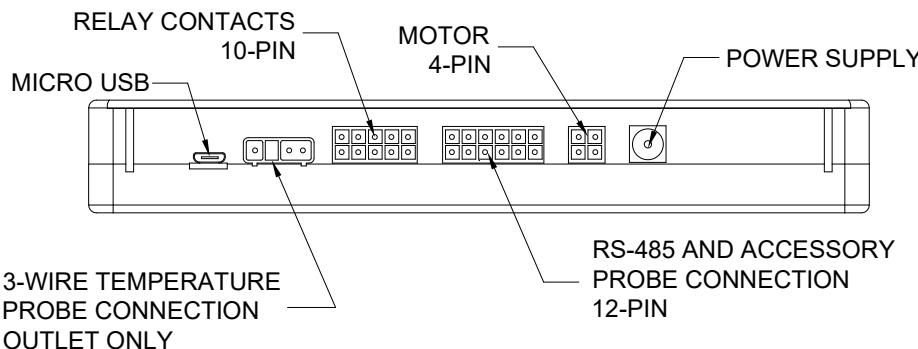


10-PIN CONNECTOR

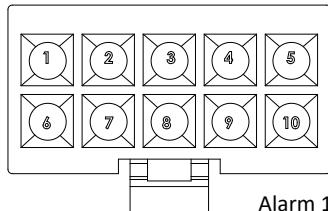

Alarm 1 = Low Step Count – Service Valve
 Alarm 2 = Outlet Temperature Too High or Too Low
 Alarm 3 = RTD Probe Broken or Disconnected
 Alarm 4 = Valve Motor Broken or Disconnected
 Alarm 5 = Loss of Power to the Control Box

12-PIN CONNECTOR

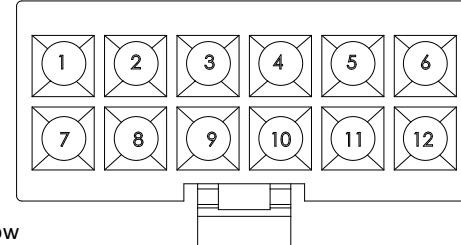

ALARM	PIN	COLOR	FUNCTION
1	1	RED	Sweep range alarm 0=clear, 1=set
	5	BLACK	
2	2	YELLOW	Temperature range alarm 0=clear, 1=set
	6	BLACK	
3	3	GREEN	Output temperature probe alarm 0=clear, 1=set
	8	BLACK	
4	4	BLUE	Motor continuity alarm 0=clear, 1=set
	9	BLACK	
5	5	WHITE	Power alarm 0=clear, 1=set
	10	BLACK	

ACCESSORY	PIN	NAME	COLOR	RTD	FUNCTION
1	1	RS-485+	RED	FIELD INSTALLATION REQUIRED	RS485 for Bacnet
	2	RS-485-	WHITE	FIELD INSTALLATION REQUIRED	
	3	GROUND	BLACK	FIELD INSTALLATION REQUIRED	
2	4	GROUND (RTD2)	BLACK	WHITE	"Position 1" Hot Inlet
	5	EXCITATION (RTD2)	GREEN	BLACK	
	6	SIGNAL (RTD2)	YELLOW	BLACK	
3	7	GROUND (RTD3)	BLACK	WHITE	"Position 2" Cold Inlet
	8	EXCITATION (RTD3)	BLUE	BLACK	
	9	SIGNAL (RTD3)	ORANGE	BLACK	
4	10	GROUND (RTD4)	BLACK	WHITE	"Position 4" Return
	11	EXCITATION (RTD4)	PURPLE	BLACK	
	12	SIGNAL (RTD4)	GRAY	BLACK	

Proton Plus – User Screens

Home Screen: Current outlet temperature and Set point temperature



Home Screen: After initial “Full Sweep” the bottom line of the digital display indicates the measured sweep value of the valve, hot to cold. Please record this numerical value as you will need it for calibration Screen 2 below. If you “miss” the “full sweep” number simply unplug the unit and plug back in and the unit will do another sweep and give you the value. The digital display now indicates current measured temperature on the mixed outlet of the valve and shows set point temperature on the line below. **Note:** A large negative value displayed at the **Cur temp** line indicates the sensor is damaged or not properly wired to the main control board.

Temperature Adjustment: Temperature is easily adjusted by pressing the key code sequence **▲ ▼ ▲ ▼ ENTER** key. At this point, the Set point will flash, and the **▲** and **▼** keys can now be used to adjust temperature up or down. When desired value is reached, pressing the **ENTER** key will store the new set point temperature and a message stating that the set point has been saved will be displayed. If no new temperature is saved, the screen display will revert back to the Home Screen after approximately 10 seconds and the set point will remain unchanged. Symbols **+** and **-** indicate whether the outlet temperature is being adjusted higher **(+)** or lower **(-)** by the controller.

Standard Menu: Options on Board/Equipped:

Pressing either the **▲** or **▼** keys will allow a user to scroll through other data points, features and options of the valve and will show the following screens and features in order.

Note: **▼** key was used for this manual’s sequence and should be considered forward direction in the menu. Pressing the **▲** key will reverse the order and can be considered reverse direction.

Menu Screen 1: Main Power Supply



Pressing ▼ 1 time displays **POWER: 12.89**

This indicates the input supply voltage to the main control board, Volts DC, and should always be at least 12 VDC

Menu Screen 2: Firmware Revision



Pressing ▼ 2 times displays **FW Rev: X.X.X.X**

This screen shows the current version of Firmware loaded into the Proton Plus processor. It may be used for reference and troubleshooting.

Menu Screen 3: Mode



Pressing ▼ 3 times displays **Mode: Proton+**

This screen shows the Mode in which the controller is programmed. In this case, the controller should always read Proton+. If another mode is displayed contact the Leonard Valve factory.

Optional Menu Screen 4: Cold Water Temperature



Pressing ▼ 1 time displays **Cold temp: XXX F or C**

This indicates the cold water inlet temperature to the Proton Plus mixing valve.

Optional Menu Screen 5: Hot Water Temperature



Pressing ▼ 2 times displays **Hot temp: XXX F or C**

This indicates the hot water inlet temperature to the Proton Plus mixing valve. If no sensor is installed this screen will not be displayed

Optional Menu Screen 6: Return Water Temperature




Pressing ▼ 2 times displays **Rtrn temp: XXX F or C**

This indicates the system return water temperature to the Proton Plus mixing valve. If no sensor is installed this screen will not be displayed

From ANY screen, the user must enter the CALIBRATION Menu in order to record the initial numerical Full Valve Sweep value (recorded in Step 10 above) for comparison to future Valve Sweep Values for any maintenance warnings moving forward on this device. To Enter Calibration: Press the **▲ ▼** buttons simultaneously. The following screen should appear:

Calibration Screen 1: Outlet Probe Calibration

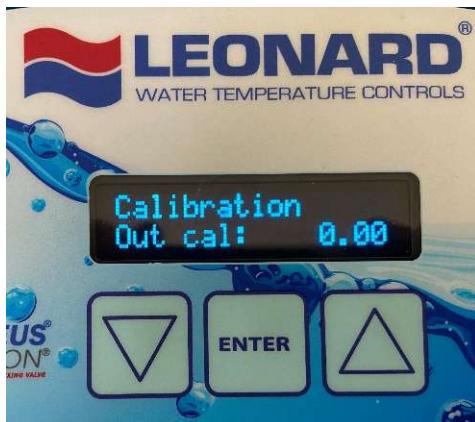

This Calibration Screen is used if the outlet valve temperature display differs significantly from a downstream temperature measurement value. It is a way to OFFSET the outlet temperature in order to agree with another temperature measurement value. Press **ENTER** to adjust Cal value, it will flash. Use **▲ ▼** buttons to adjust Cal value (+/-) in order to agree with other values. Press **ENTER** to save the Cal value. If Calibration is not needed, Press the **▼** arrow to advance to the next screen.

Calibration Screen 2: Hot Water Probe Calibration



This Calibration Screen is used if the hot water inlet temperature display differs significantly from a different temperature measurement value. It is a way to OFFSET the temperature in order to agree with another temperature measurement value. Press **ENTER** to adjust Cal value, it will flash. Use **▲ ▼** buttons to adjust Cal value (+/-) in order to agree with other values. Press **ENTER** to save the Cal value. If Calibration is not needed, Press the **▼** arrow to advance to the next screen.

Calibration Screen 3: Cold Water Probe Calibration



This Calibration Screen is used if the cold water temperature display differs significantly from a downstream temperature measurement value. It is a way to OFFSET the outlet temperature in order to agree with another temperature measurement value. Press **ENTER** to adjust Cal value, it will flash. Use **▲▼** buttons to adjust Cal value (+/-) in order to agree with other values. Press **ENTER** to save the Cal value. If Calibration is not needed, Press the **▼** arrow to advance to the next screen.

Calibration Screen 4: Return Water Probe Calibration



This Calibration Screen is used if the hot water inlet temperature display differs significantly from a different temperature measurement value. It is a way to OFFSET the temperature in order to agree with another temperature measurement value. Press **ENTER** to adjust Cal value, it will flash. Use **▲▼** buttons to adjust Cal value (+/-) in order to agree with other values. Press **ENTER** to save the Cal value. If Calibration is not needed, Press the **▼** arrow to advance to the next screen.

Calibration Screen 5: Full Valve Sweep Count



The above Calibration Screen is used to enter the initial Full Valve Sweep Value obtained and recorded in Step #10 from initial power up. Press **ENTER** to input FVS value, it will flash. Use **▲** button to adjust FVS counts value and advance until it agrees with the Initial Sweep Value recorded in during initial power up. Press **ENTER** to save the FVS counts value.

Calibration Screen 6: Scale



The above Calibration Screen is used to enter the temperature scale to be displayed by the controller. Press **ENTER** to change the value, it will flash. Use **▲** button to adjust to F (Fahrenheit) or C (Celsius). Press **ENTER** to save the Scale.

Calibration Screen 6: Bacnet



The above Calibration Screen is used to turn on or off the Bacnet capability of the Proton Plus controller. Press **ENTER** to change the value, it will flash. Use **▲** button to adjust to Y (Yes – Data On) or N (No – Data Off). Press **ENTER** to save Bacnet state.

To Exit Calibration: Press the **▲ ▼** buttons simultaneously. This will return you to the HOME Screen:

Home Screen: Current outlet temperature and Set point temperature



The user is returned to the 'Home Screen' which displays current temperature as measured on valve outlet and the set point temperature on the line below.

Note: A large negative value displayed at the **Cur temp** line indicates the sensor is damaged or not properly wired to the main control board.

Note: Pressing the **▲** key will reverse the order previously shown and allow the user to scroll through the above menu items in reverse order.

Proton Plus Digitally Controlled Mixing Valve Error Codes

Error codes are displayed on the LCD screen. Errors must be manually cleared by pressing **ENTER** and the error condition has been corrected. Error Codes on the Proton Plus Digitally Controlled Mixing Valve are listed below.

Error Code 1: Valve Service Required



This Error indicates that the Proton Plus Valve has reached less than a certain % of initial Sweep Value recorded during initial start up. This translates into lost motion on the shuttle and ultimately loss of ideal temperature control. The Mechanical Valve Components should be taken apart, cleaned of all debris or scale inside the valve body, inspected and serviced. Worn components must be replaced if necessary.

The error will also display when there is a loss of power to the motor or a loss of continuity. After servicing, the FVS number may need to be adjusted to match the new value via the calibration menu

Error Code 2: Check Probe (Temperature Probe)



This Error indicates that the RTD Temperature Probe installed in the valve outlet is either disconnected from the Control Box or the wires are broken, and it needs replacement. Please verify 3 wire connector on left side of control box is firmly engaged and verify that wires are continuous to the probe end. Replace if necessary.

Error Code 3: T3 High or Low



This Error indicates that the outlet temperature (T3) is 10°F higher or lower than the outlet set point temperature. Error message will alternate with current outlet temperature. Error self clears once temperature is back within the $\pm 10^{\circ}\text{F}$ threshold. There are a variety of reasons this error can be shown, but most commonly the issue is an improper plumbing arrangement (See Piping Method W). Also check the wiring connections from the valve motor to the Proton Plus Control Box.



Proton Plus Digitally Controlled Mixing Valve Disinfection Mode

WARNING: The Proton Plus Digitally Controlled Mixing Valve is equipped with the ability to program the valve to move to full hot position, which will allow ONLY high temperature hot supply water to enter the device and subsequently deliver that high temperature water downstream of the device. There is inherent risk in this procedure and it is a feature which allows the user to 'Disinfect' the plumbing system downstream of the device.

BEFORE THIS MODE IS ENGAGED, AN AUTHORIZED USER MUST BE AWARE OF THE POTENTIAL RISKS TO END USERS DOWNSTREAM OF THIS DEVICE, AND MUST ALSO MAKE PROVISIONS TO PUT SAFETY MEASURES IN PLACE DURING THE DISINFECTION STAGE TO ENSURE USER SAFETY. SEVERE BURNS, SEVERE INJURY AND/OR EVEN DEATH MAY OCCUR IF SUCH PROVISIONS ARE NOT IN PLACE ACTIVATING THIS FEATURE.

To enter Disinfection Model, Press the **▲** and **ENTER** buttons simultaneously and release.

Screen 1: Disinfection Mode

Press **ENTER** to advance to the next screen.



Screen 2: Minimum Disinfection Temperature

Set the minimum temperature the disinfection cycle will run at. If the outlet temperature falls below the minimum disinfection temperature the cycle will end. Default temperature is 158°F. Use the **▲** **▼** buttons to change value and press **ENTER** to advance to the next screen.



Proton Plus Digitally Controlled Mixing Valve Disinfection Mode

Screen 3: Maximum Disinfection Temperature

Set the maximum temperature the disinfection cycle will run at. If the outlet temperature falls below the minimum disinfection temperature the cycle will end. Default temperature is 185°F. Use the ▲ ▼ buttons to change value and press ENTER to advance to the next screen.



Screen 4: Warmup

Set the time, in minutes, that should be allowed for the hot water inlet to the valve to warm up to disinfection-suitable temperatures. If temperature is not above Minimum or below the Maximum temperatures, the disinfection cycle will end. Use the ▲ ▼ buttons to change value and press ENTER to advance to the next screen.



Screen 5: Duration

Set the time, in hours and minutes, that the disinfection cycle run. Time is adjustable in 15 minute intervals. Use the ▲ ▼ buttons to change value and press ENTER to advance to the next screen.



Proton Plus Digitally Controlled Mixing Valve Disinfection Mode

Confirmation Screens

Confirm each of the previous four parameters settings by pressing ENTER for each. Pressing either arrow will automatically end the disinfect cycle.



Once a disinfection cycle is initiated, the top line of the controller will display **Warmup** along with a timer that is counting down. The bottom line displays the current outlet temperature. If the outlet temperature does not reach the Minimum disinfection temperature within the allotted Warmup time, the disinfection cycle will automatically cancel. Pressing the ENTER button will end the disinfection cycle.



Proton Plus Digitally Controlled Mixing Valve Disinfection Mode

When the outlet temperature reaches the Minimum disinfection temperature, the warmup screen will automatically change to a countdown of the **Stabilization** time. This lasts for 1 minute and is meant to ensure stable disinfection temperatures before the disinfection cycle timer starts.



After Stabilization, a new countdown for the Duration of disinfection with the current temperature outlet temperature displayed on the bottom line. If the temperature goes below the minimum or above the maximum disinfection temperatures, then the disinfection cycle will end automatically.

Disinfection cycle ends when the Duration timer is done counting down. The cycle can also be manually aborted by pressing the ENTER button at any time.



After a disinfection cycle is over, the controller will go into a Cooldown mode until the outlet temperature returns to set point temperature. Once the temperature is stable, the screen will revert to the standard home screen.



SENSOR TROUBLESHOOTING AND REPLACEMENT

When a sensor is disconnected or no longer in proper working condition, an error message is displayed on the controller **Err: Check Probe** See Error Code above.

TURN OFF POWER TO THE PROTON PLUS CONTROL BOX BEFORE TROUBLESHOOTING OR REPLACING ANY WIRES AND SENSORS.

Determine if the sensor is truly broken and not a simple disconnection. Please verify the 3-wire RTD Temperature Probe connector is firmly plugged into its location on the bottom left of the Proton Plus Control Box.

If the sensor is properly connected to the controller and the condition persists, then the sensor needs to be replaced. Contact Local Leonard Valve Representation for part number

803203 – Outlet Sensor

809001 – Inlet/Return Sensor

Shut down hot, cold and outlet ball valves and depressurize the pipes. Remove the defective sensor from the piping and install new sensor in its place. For RTD probes new compression fittings are required. **Do not overtighten** compression nuts before re-pressurizing valve (**See Page 18**).


1. Open cold line and outlet ball valves to pressurize valve, once it is confirmed there are no leaks open the hot line as well. Introduce power to the Proton Plus control box and confirm that the replacement sensor is providing proper feedback and data.

INSTALLING AND REPLACING TEMPERATURE PROBES

The RTD temperature probes used with Proton Plus assemblies are simple to install. On the outlet the temperature probe is connected to the tee with a $\frac{1}{4}$ " MNPT x $\frac{1}{8}$ " compression fitting. Teflon tape and a small amount of thread sealant should be used on the NPT side of the fittings. The ferrule, installed with the cone facing down, then sits on the top of the compression inlet. The compression nut is then put over the ferrule and tightened slightly, just enough to hold the ferrule in place. The RTD temperature probe is then inserted through the entire fitting until the end of the probe reaches approximately the center of the desired measured water stream. Finally, the compression nut is tightened by hand to **"hand-tight" plus $\frac{1}{8}$ to $\frac{1}{4}$ turn** with an adjustable or open end wrench. **Use caution not to overtighten the fitting and only tighten until dripping stops.**

NOTE: if overtightened, leaks are probable and the entire RTD and compression fitting must be replaced!



Replacement part #803203

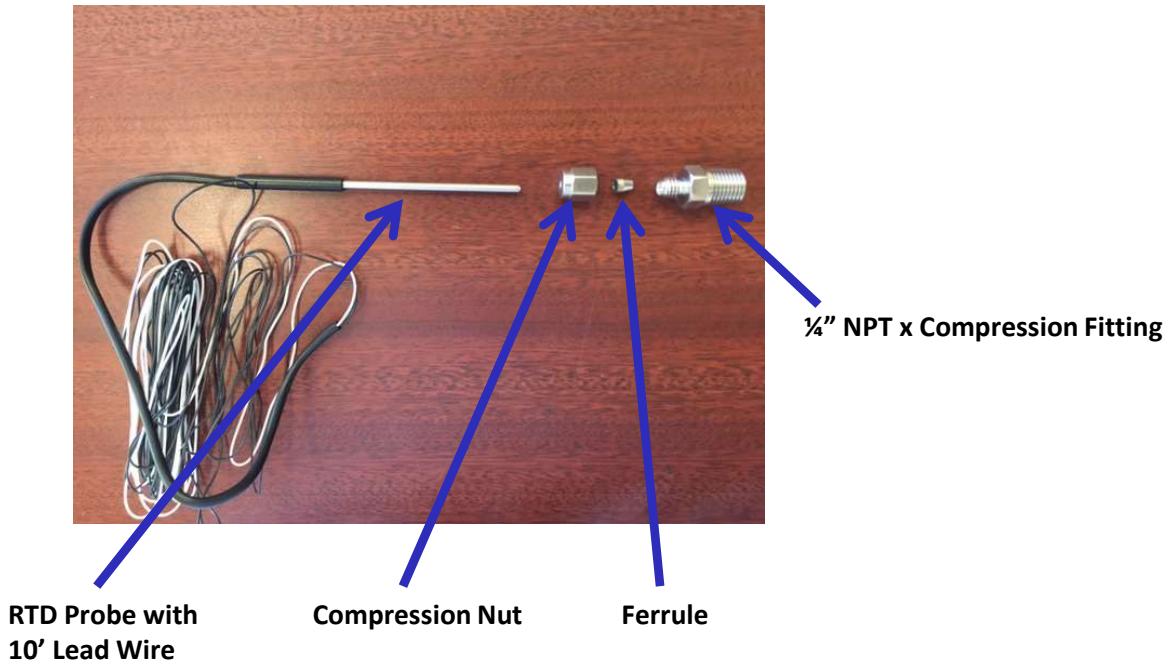

BMS CONNECTION PROCEDURE

USE THE INSTRUCTIONS BELOW TO CONNECT PROTON PLUS
TO A BUILDING MANAGEMENT SYSTEM (BMS)

1. Connect the Proton Plus control box to the BMS using 12-Pin connector. Wiring is shown on Page 10.
2. Power up the Proton Plus control box. Power must be on to be able to configure BMS settings.
3. Connect a laptop to the Proton Plus control box via the Micro-USB port located on the bottom of the box.
4. Download **LEONARD NPU**. After unzipping the file, navigate to the NPU application. See www.leonardvalve.com for the files.
5. Once the application is running, the application should automatically recognize the BMS card installed in the Proton Plus control box. Now the protocol can be selected, BACnet MS/TP or Modbus RTU Slave. Changes can be made to the network parameters once the protocol is selected.
6. Once parameters are set, click on ‘Submit’ to save them.

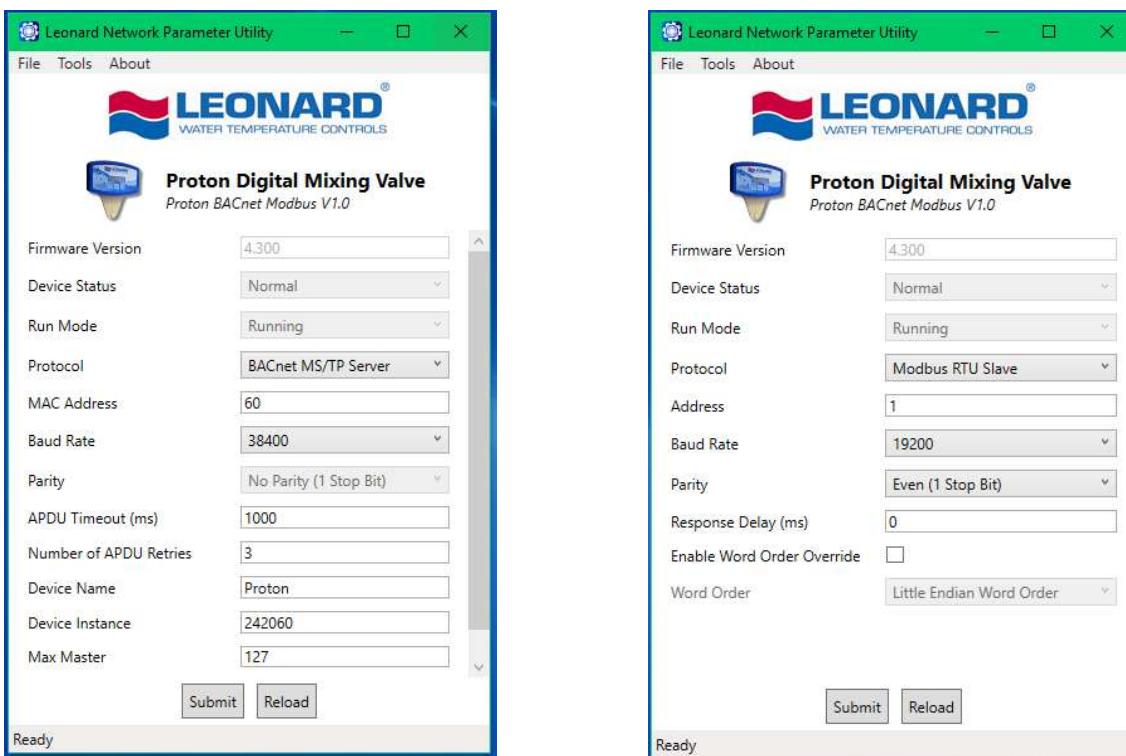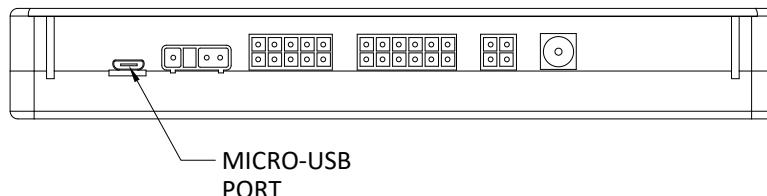

BACnet OBJECT LIST

Object Name	Object Type	Instance	Units	Default COV Increment	Active Text	Inactive Text	Polarity	Number of States	Notes
TempOut	Analog Input	0	no-units		1 N/A	N/A	N/A	N/A	°F or °C
TempHotIn	Analog Input	1	no-units		1 N/A	N/A	N/A	N/A	°F or °C
TempColdIn	Analog Input	2	no-units		1 N/A	N/A	N/A	N/A	°F or °C
TempReturnIn	Analog Input	3	no-units		1 N/A	N/A	N/A	N/A	°F or °C
Alarm1	Binary Input	0	N/A	N/A	Alarm	Normal	Normal	N/A	0 = Off 1 = On
Alarm2	Binary Input	1	N/A	N/A	Alarm	Normal	Normal	N/A	0 = Off 1 = On
Alarm3	Binary Input	2	N/A	N/A	Alarm	Normal	Normal	N/A	0 = Off 1 = On
Alarm4	Binary Input	3	N/A	N/A	Alarm	Normal	Normal	N/A	0 = Off 1 = On
Alarm5	Binary Input	4	N/A	N/A	Alarm	Normal	Normal	N/A	0 = Off 1 = On 2 = On 3 =
FlowSwitchState	Multi-state Input	0	N/A	N/A	N/A	N/A	N/A	3	Unsupported

MODBUS OBJECT LIST

Register/discrete numbering is 1-based

32-Bit registers are comprised of two 16-bit registers, least significant register first

Description	Type	Register/Discrete Number	Data Type	Notes
Alarm1	Discrete Input		1 N/A	
Alarm2	Discrete Input		2 N/A	
Alarm3	Discrete Input		3 N/A	
Alarm4	Discrete Input		4 N/A	
Alarm5	Discrete Input		5 N/A	
				0 = Off 1 = On 2 = Unsupported
Flow State	Input Register		1 16-Bit Unsigned Integer	All other values = Reserved
TempOut	Input Register		2 32-Bit Floating Point	°F or °C
TempHotIn	Input Register		4 32-Bit Floating Point	°F or °C
TempColdIn	Input Register		6 32-Bit Floating Point	°F or °C
TempReturnIn	Input Register		8 32-Bit Floating Point	°F or °C

Alarm 1 = Low Step Count – Service Valve

Alarm 2 = Outlet Temperature Too High or Too Low

Alarm 3 = RTD Probe Broken or Disconnected

Alarm 4 = Valve Motor Broken or Disconnected

Alarm 5 = Loss of Power to the Control Box

WI-FI CONNECTION PROCEDURE

USE THE INSTRUCTIONS BELOW TO CONNECT PROTON PLUS TO A WI-FI NETWORK


1. Power up the control box and get into the calibration mode by pressing the \uparrow and \downarrow arrows at the same time and then letting go.
2. Scroll to the “Wi-Fi” menu screen using the \uparrow and \downarrow arrows. Press **ENTER** and change the setting to “Y” using the \uparrow and \downarrow arrows. Press **ENTER** to in the new setting.



3. Press the \uparrow and \downarrow arrows at the same time and then let go to get back to the home screen. Cycle power to the controller.
4. Connect a MicroUSB cable to the controller located on the bottom-left of the controller. The other end of the cable should be connected to a computer.



5. Open the Proton3ToolV19 and select the connection port that the controller is connected to. This tool can be found at the Leonard Valve website, www.leonardvalve.com.
6. Once connected, press the “Query” button to bring up the current settings. If a new box is being set up, the fields will be completely blank. In cases where the controller has already been commissioned, the “Query” button will show all current settings.
7. Fill in the parameters for each setting. Note that the controller will need its own dedicated e-mail address that will need to be set up by facility IT personnel. An example of a filled-out parameter list is below.

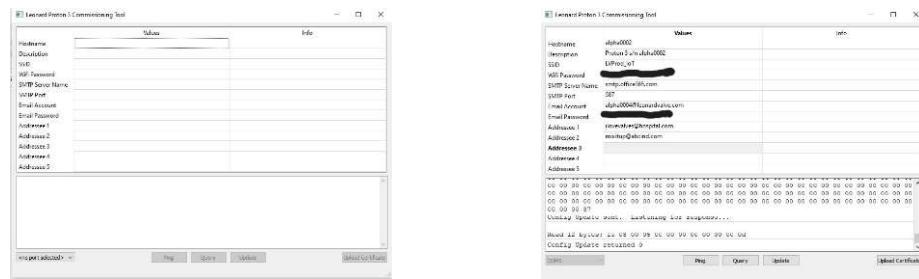


8. If necessary, IT personnel will need to also upload a certificate. This can be provided by the IT network managers.
9. Click on “Update” to save the settings and cycle power to the controller.
10. Open a browser and type in **http://** followed by the hostname entered in the Proton Plus commissioning tool along with /dashboard. For example, for the previous screenshot, the site should be entered as **http://alpha0002/dashboard**. Below is what the landing page should look like. Bookmark this page for later reference and disconnect MicroUSB cable.



Proton Dashboard - alpha0003 (192.168.1.111)

PROTON PLUS PARTS

Parts 1-4 are the same for all sizes, part #5 is specific to each model

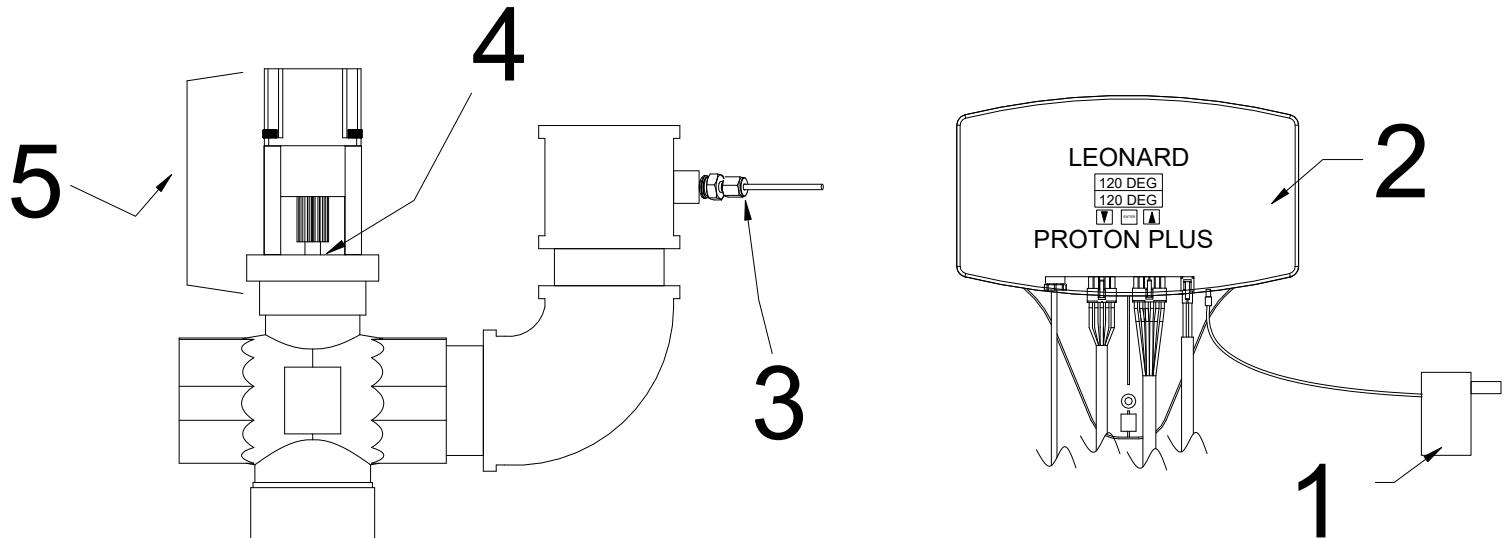

ITEM #	DESCRIPTION	PART #
1	POWER SUPPLY ONLY	8080
2	CONTROL BOX (WITH POWER SUPPLY)	8971
3	OUTLET SENSOR COMPLETE	803203
4	BONNET ASSEMBLY ONLY	8973
5 (075)	COVER ASSEMBLY FOR PPV-075 ONLY	8974
5 (100)	COVER ASSEMBLY FOR PPV-100 ONLY	8975
5 (125)	COVER ASSEMBLY FOR PPV-125 ONLY	8976
5 (150)	COVER ASSEMBLY FOR PPV-150 ONLY	8977
5 (200)	COVER ASSEMBLY FOR PPV-200 ONLY	8978
5 (250)	COVER ASSEMBLY FOR PPV-250 ONLY	8979

PROTON PLUS FLOW RATES

Valve size will most likely be less than inlet / outlet pipe sizes

		PRESSURE DROP (PSI)																			
MODEL #	Size	Minimum Flow*	5 PSI	10 PSI	15 PSI	20 PSI	25 PSI	30 PSI	35 PSI	40 PSI	45 PSI	50 PSI									
PPV075LF 3/4"		3 GPM	16	24	28	33	37	40	43	46	49	52									
PPV100LF 1"		5 GPM	35	56	66	77	86	93	102	107	112	118									
PPV125LF 1-1/4"		7 GPM	52	75	92	104	118	131	140	148	156	164									
PPV150LF 1-1/2"		10 GPM	73	100	120	134	147	159	168	177	185	192									
PPV200LF 2"		12 GPM	106	148	182	205	230	244	256	266	274	280									
		Flow in Gallons per Minute (GPM)																			
Valves should be sized based on a 5 to 10 PSI pressure drop																					
Valve size will most likely be less than inlet / outlet pipe sizes																					

Suitable for indoor use only

Not for use in process applications, install as an ASSE 1017 master mixer in a domestic hot water system that includes other mixing devices approved to ASSE 1016, 1069, 1070, and 1071.

CAUTION! ALL THERMOSTATIC WATER MIXING VALVES AND SYSTEMS HAVE LIMITATIONS! THEY WILL NOT PROVIDE THE DESIRED PERFORMANCE OUTSIDE OF THEIR FLOW CAPACITY RANGE! CONSULT THE CAPACITY CHART BELOW AND OBSERVE MINIMUM FLOWS SHOWN.

LIMITED WARRANTY

Leonard Valve Company (hereinafter, "Leonard") warrants the original purchaser that products manufactured by Leonard will be free from defects in material or workmanship under normal conditions of use, when properly installed and maintained in accordance with Leonard's instructions, for a period of one year from the date of shipment. During this period, Leonard will at its option repair or replace any product, or part thereof, which shall be returned, freight prepaid, to the Leonard factory and determined by Leonard to be defective in materials or workmanship. Leonard provides no warranty, express or implied, which extends beyond the description contained herein. LEONARD SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE. Nonetheless, some jurisdictions may not allow the disclaimer of certain implied warranties, in which case Leonard hereby limits such implied warranties to the duration of the limited warranty period contained herein. Some jurisdictions may not allow limitations on how long an implied warranty lasts, so the foregoing durational limitation may not apply to you. In no event will Leonard be liable for labor or incidental or consequential damages. Any alteration or improper installation or use of this product will void this limited warranty. If any provision of this limited warranty is prohibited by law in the applicable jurisdiction, such provision shall be null and void, but the remainder of this limited warranty shall continue in full force and effect.